

Metal Sheet **Seamless**

www.onestockhome.com

Metal Sheet **Seamless S1**

Metal Sheet Seamless S1 can be installed easily with Snap Lock system. The technique is to fix with the screw at the right edge of each sheet and then have the other sheet covered that area. With its special design, the cap height is 1 inch and can therefore help the chance of water leakage really well



1. Install the metal sheet on the purlin and its frames



2. Fastening the sheet with purlin



3. Place another sheet on top of the existing one




4. Press the new layered sheet on top of the existing sheet



5. Once installed, the roof will look rather seamless with no marks of screws

Metal Sheet **Seamless S2**

Metal Sheet Seamless S2 can be installed easily with special Clip Lock System. The technique is to fix with the screw at the right edge of each sheet and then have the other sheet covered that area. With its special design, the cap height is 4.5 cm and can therefore help the chance of water leakage really well

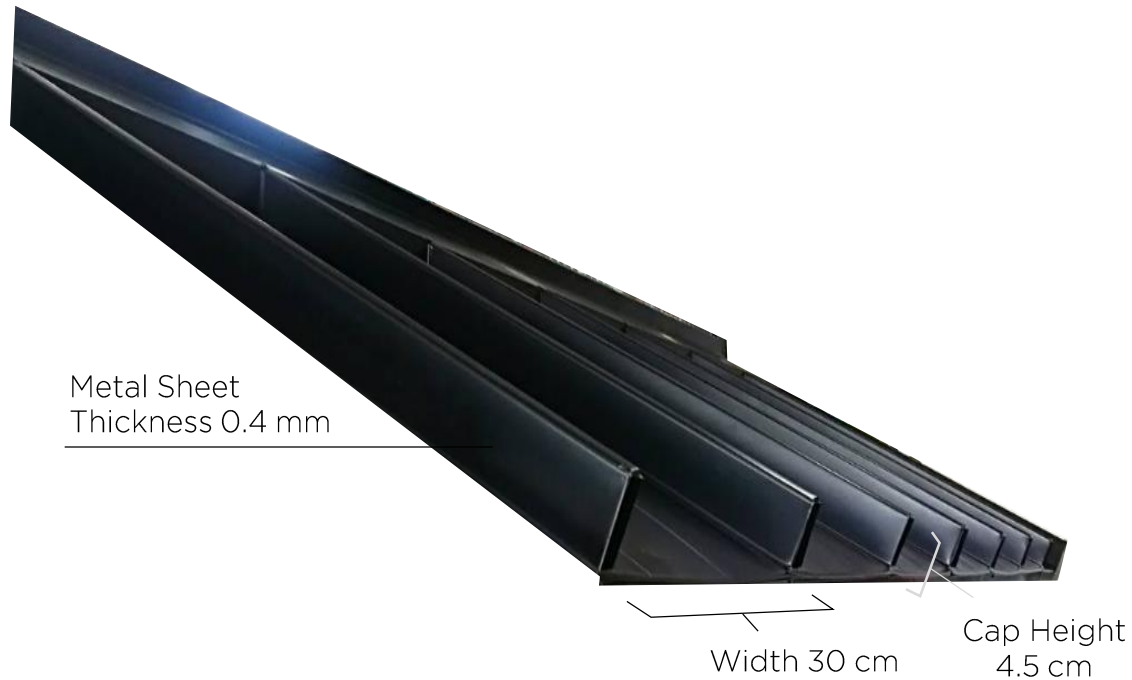

1. Place clip lock on the sheet cap



2. Fasten the lock on the purlin



3. Lay another sheet on top of the existing one



4. Press the sheet on top it will fit perfectly across the entire edge



5. Dover the sheet with the special design cap



6. Once installed, the roof will look rather seamless with no marks of screws